


 LeEco

uMax85

User Manual

Table of Contents

Getting Started	4
Warnings	5
What's Inside	6
Opening Instructions	7
Assembly Instructions	8
Settings	10
Connecting Your TV	11
Powering On/Off	12
Pairing the Remote Control	12
Remote Control Functions	13
Antenna Setup	14
Display	15
Sound	15
Interface & eui Apps	16
Android TV™	17
Introducing eui — Ecosystem User Interface	18
Other	19
Troubleshooting	20
Specs	21
Use & Safety	22
Certifications	23
TV Standard Limited Warranty	25

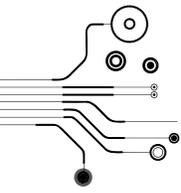

What's Inside




2 3D Glasses
w/ Batteries*




2 Stands



6 Bolts

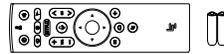


Remote &
2 AA Batteries

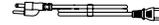


Power Cord



Cable

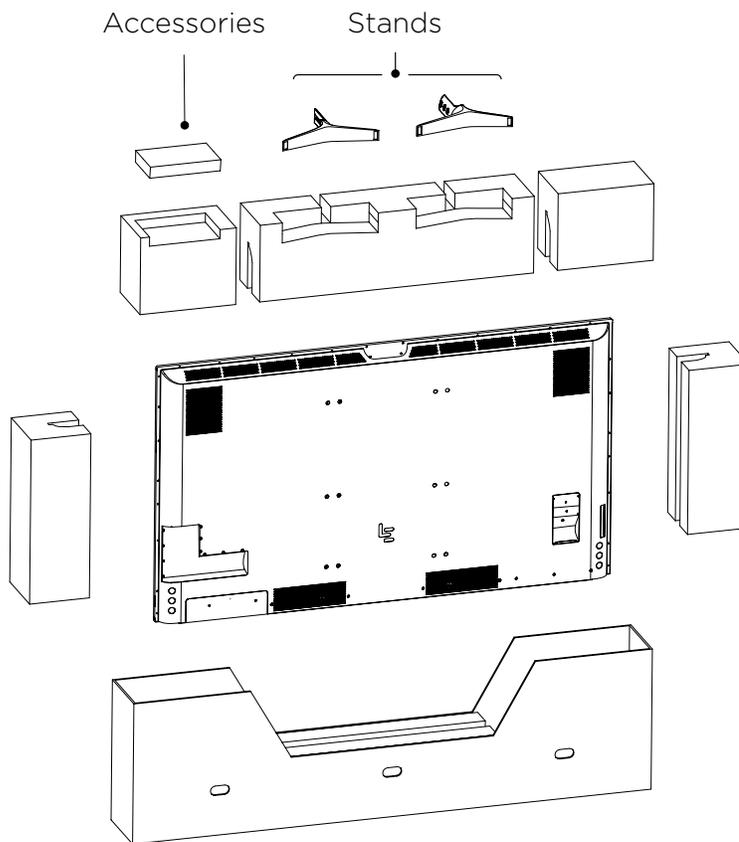

* remove battery protection to activate batteries

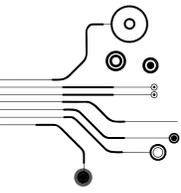

Opening Instructions

Step 1: Stand TV box upright.

Step 2: Remove lock clips (squeeze tabs inward and pull out) from **(E)**, and lift box lid from package base.

Step 3: Pull out accessories kit and stands from foam cover **(A)**.

Step 4: Remove front protective cover **(B)** from TV, and place foam side down.



Step 5: Gently tilt and lower the TV, backside down, until evenly aligned with foam cover **(B)**.

Step 6: Remove box base **(E)**.


Step 7: Remove the screws and covers from holes on each side at the bottom of the TV.

Step 8: Secure the stands to each side of TV using the bolts provided. Recommended: Place a soft covering beneath stand edges where they meet the floor.


Step 9: Remove protective foam **(A, C and D)**, and carefully lift TV upright, taking care not to press on screen.

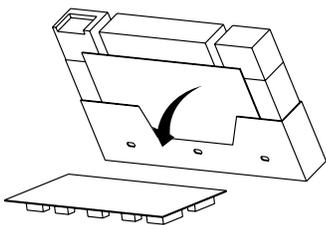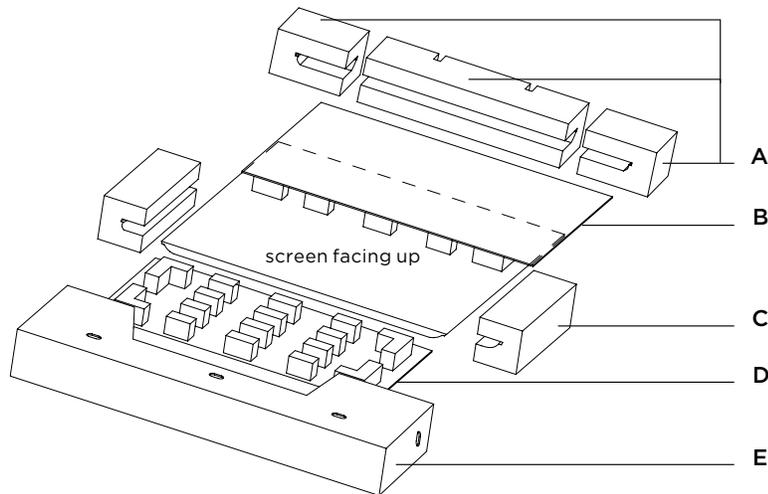


Ensure foam covers are evenly aligned (D) and (B)

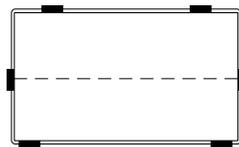

Follow diagram for hand positioning

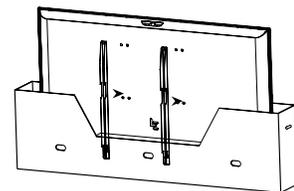

Keep box base on if installing wall mount

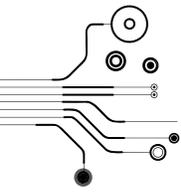


Assembly Instructions


Installing the Stand

4 people required for installation. Wear safety gloves.


Step 1: Carefully lift TV out of box. Slowly set down with screen facing up. To avoid damaging the product, use caution and refrain from pressing on screen.

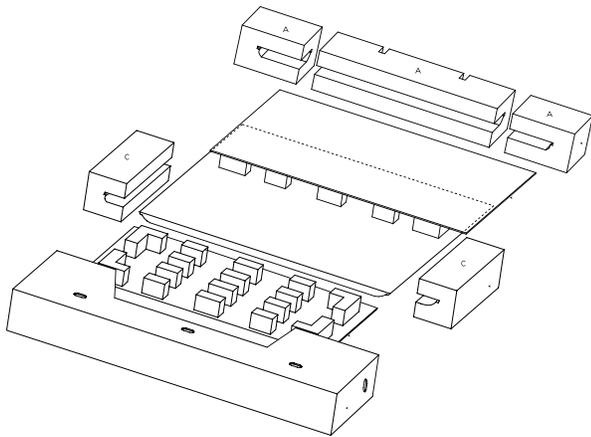


Step 3: Secure the stands to each side of TV using the bolts provided. Recommended: Place a soft covering beneath stand edges where they meet the floor.

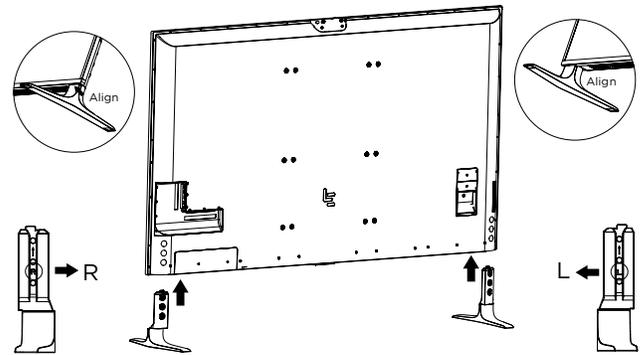


Step 2: Remove the screws and covers from holes on each side at the bottom of the TV.

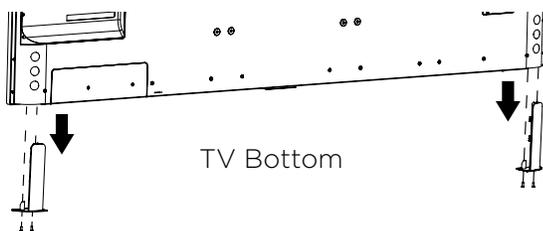

Step 4: Make sure there is enough surrounding space as indicated below.



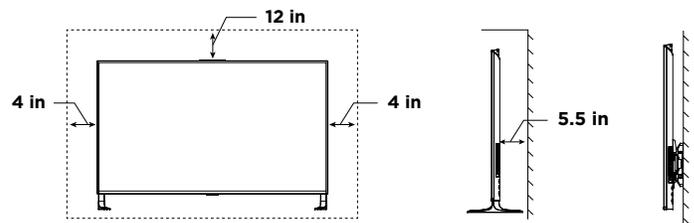


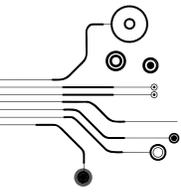

Installing a Wall Mount

It is advisable to consult a qualified professional. To avoid electric shock, power off television prior to completing these steps. LeEco maintains no liability for damages or personal injury. Before installing, ensure the wall will support the combined load of the equipment and hardware. Consult your wall mount guide for weight specifications and product-specific instructions.

- To ensure device stability, locate and align television with wall studs.
- Follow diagram to ensure proper spacing around the device.
- Four people recommended.
- Secure television to wall mount using VESA standard wall mount screw locations:
 - 400x400mm (VESA® standard)
 - 500x400mm
 - 400x700mm
 - 500x700mm

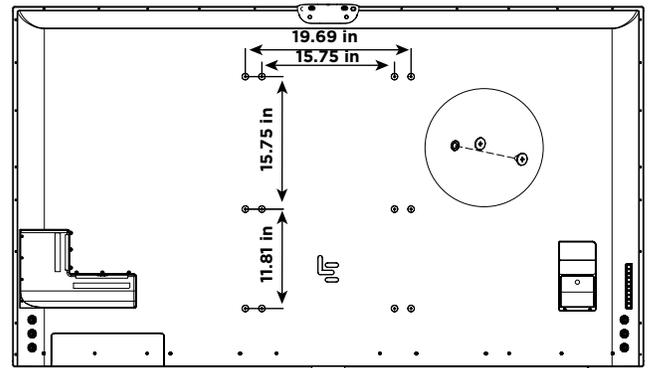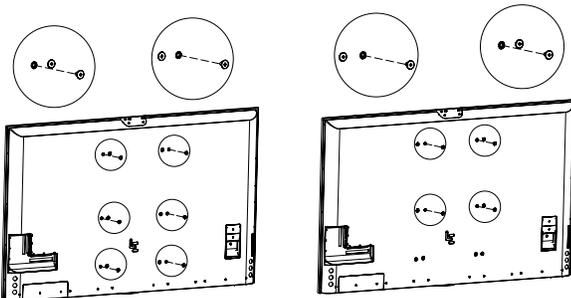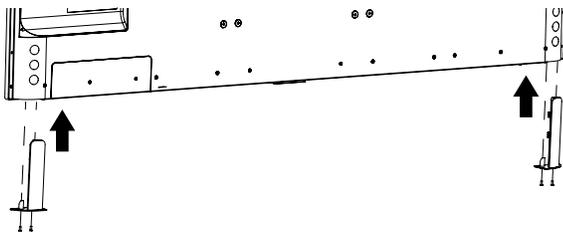

Wall Mount Screw Locations

⚠ Do not cover ventilation hole or put any object into enclosure, such as newspaper, curtain, etc.

Reserve adequate ventilation space around ecotv.


Do not place your ecotv in any place where there is vibration.

Do not place ecotv close to air conditioner. Otherwise, moisture condensation may appear on interior panel of display and damage the panel.

Do not place ecotv in any area with strong electromagnetic field, or the TV may incur damage and interference.

⚡ **Contact a professional for assistance when wall mounting your TV. We are not responsible for any damage to the product or injuries. Do not power on the TV when performing wall mount installation. It may cause personal injury due to electric shock.**

Connecting your ecotv

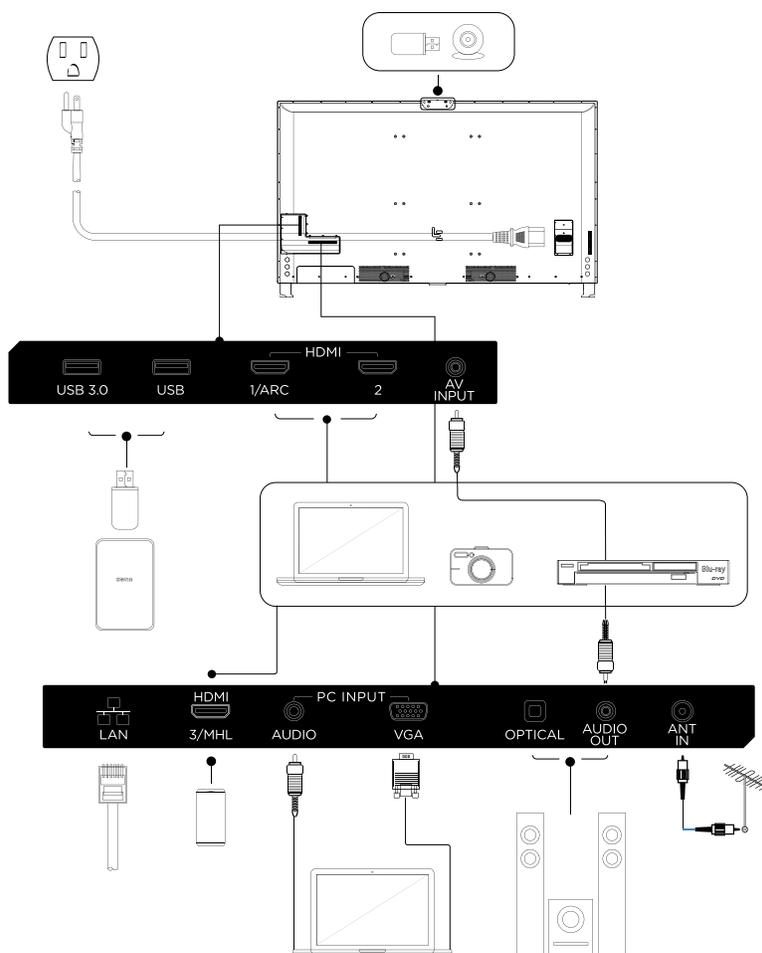

HDMI: Connect external components (such as Blu-ray and game consoles) to your TV using HDMI.

ARC (Audio Return Channel): Send a digital signal to a compatible device without the need for an additional optical audio connection.

MHL: Use this option for mobile phones and cameras.

A/V (Composite): Connect to an older-generation device, such as VCR, game consoles or DVD player, using the composite cable*.

Digital Optical Audio: Connect to external sound devices using optical audio cable.


Video Graphics Array (VGA): Use your TV as a monitor by connecting your computer with a VGA cable**.

PC Input: Connect PC audio to TV using 3.5mm audio cable (not included).

Antenna: Connect to antenna by plugging coaxial cable into the ANT IN connector.

Connecting to Internet: Connect TV to the internet using a wired (LAN) or wireless (built in Dual Band 802.11 b/g/n/ac Wi-Fi) connections.

*Male RCA cable not included. **VGA cable not included.

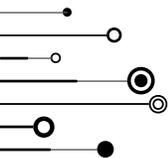

Powering On/Off

Step 1: Plug TV into a power outlet.

Step 2: Turn the switch under the TV to ON mode.

Step 3: To turn on/off the TV, press power button on your remote. **Note:** Wait about five seconds for TV to fully power on.


Step 4: A light at the bottom center of your TV indicates the power status:

Blue: TV is on

Red: TV is off

Step 5: To enter power saving mode, press and hold the power button for two seconds.


Note: Rebooting will prompt Android TV™ setup to relaunch, which can take up to 35 seconds.

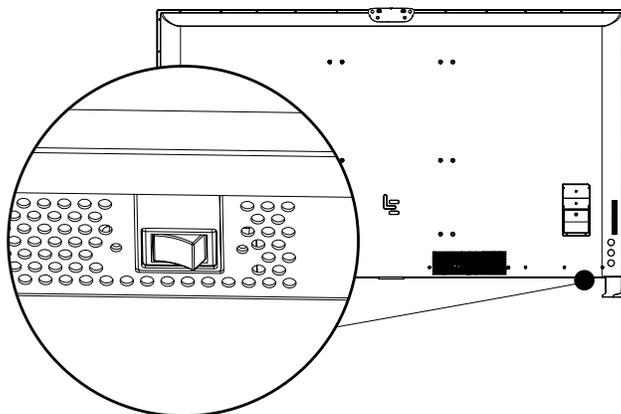

Remote Control Pairing

Slide battery cover off of remote and locate pairing button. Insert 2 AA batteries, press and hold button until connection is confirmed on screen.

Note: In order to connect, remote must be less than eight inches from lower section of TV.

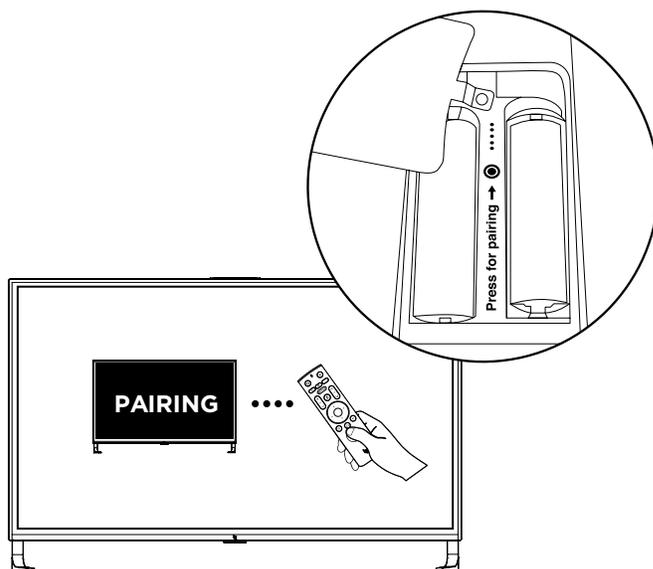



Android TV™

Launching your interface:

Select language: Once your device is powered on, you'll be prompted to select your preferred language.

Sync external device (optional): Transfer Google™ EcoPass membership account information from an external device.

Configure Wi-Fi: Here, you'll be asked to select your network connection and enter your Wi-Fi password. (this step will be omitted when ethernet cable is plugged into your TV)

Login with Google (optional): Logging in with Google allows you to instantly sync your account preferences and information for an enhanced experience.

Review terms and conditions: Review and accept terms and privacy disclosures.

Location services: Indicate your preferences for third party applications that request your location.

Feedback reporting: Indicate whether to generate and send automated reports on any technical issues.

Channel sources: Select input settings.




Google Voice Search™

Search through thousands of movies and shows with the press of a button — just navigate to the Google Voice Search™ icon at the top left from the home screen. You can also use the microphone shortcut button on your remote control. Simply press the button and speak a command. For example, you might say the name of your favorite actor, or “Show me action movies” for a smart list of related entertainment. Finding what you want to watch has never been simpler.

Google Cast

Cast your entertainment

Cast entertainment from smartphone to TV, instantly switch from phone to TV using built-in Google Cast™. To get started, download any Google Cast-enabled app on your phone. Sync your TV and phone to the same wireless network, and press the Cast button on your phone. Now, select your TV from the list. Entertainment will launch on your TV.

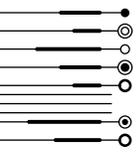

Troubleshooting

Issue:

My television isn't powering on.

Solution:

- Plug TV into a power outlet.
- Confirm that power cord is securely plugged into TV.
- Make sure the switch behind the TV is turned on.
- A blue light at the bottom of your TV indicates power is on.

The remote isn't working.

- Make sure you've inserted two AA batteries. Slide battery cover off of remote and locate pairing button.
- Press and hold pairing button until connection is confirmed onscreen.

The screen seems too dark.

- By default, your TV is set to Energy Saving mode, which impacts brightness. To adjust, press the Settings button on your remote, and navigate to:
Picture > Display Mode

Are there other display settings?

- Additional display options can be found by navigating from the home screen to:
Settings > Picture > Mode settings

I want to adjust the audio.

- From home screen, navigate to:
Settings > Sound
- There, you can adjust sound format, and volume range.

My game console (or other device) isn't connecting.

- Ensure any external components (such as Blu-ray™ and game consoles) are connected to your TV using HDMI. Use the Input selection on the Home screen to select the correct source.

I still have a question.

- Contact customer support at 855-665-3326, or visit forum.le.com